


HOW TO USE THE QUICK TESTER GR 92

The Quick Tester GR 92 allows a fast 'YES/NO' functionality check of ZVA Slimline 2 GR and ZVA 200 GR vapour recovery nozzles. It fits all 21 mm OD unleaded spouts with VR suction inlet '92'.

1. With the O-Ring facing the spout, slide the tester onto the spout, and tighten by pushing and turning it against the VR suction inlet.
2. Insert the spout fully into the tank so that the automatic shut-off can operate as usual.
3. Pull the lever fully and dispense a few litres. The Quick Tester will make an audible sound if the vapour suction is working. Please note, the Quick Tester will not measure whether the volumetric return rate is correct.


Sound:
Vapour suction is working.

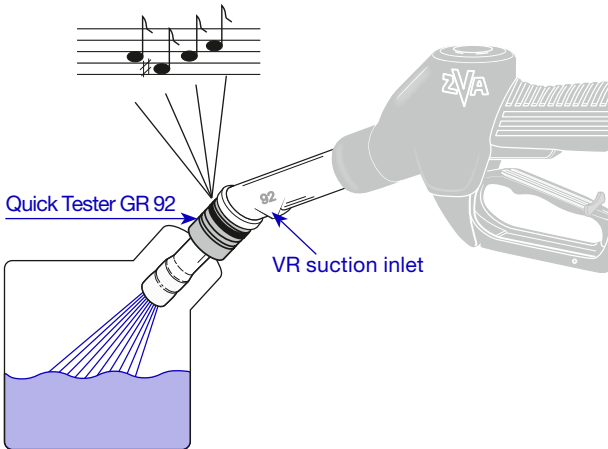

4. If there is no sound, the VR system may be defective. If in doubt, repeat the test with the spare Quick Tester to verify the result.

IMPORTANT HINTS:

Experience has shown that some spouts may be damaged or worn so that the Quick Tester does not fit tightly against the vapour inlet. If a replacement spout is not available please use the supplied soft seal ED 092 (see picture).

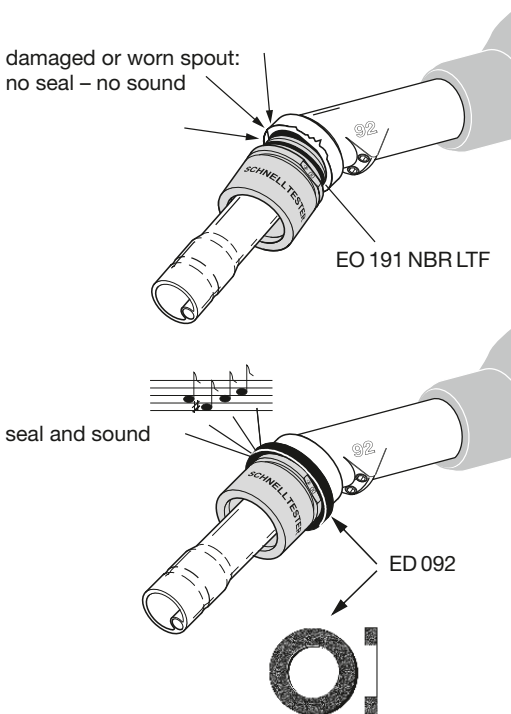

If the assembled O-Ring EO 191 NBR LTF has to be replaced, only use the original spare O-Ring which is included in the twin pack. This seal is electrically conductive and ensures electrical continuity between the tester and the nozzle.

ELAFLEX 

ELAFLEX HIBY GmbH & Co. KG

Schnackenburgallee 121 · 22525 Hamburg, Germany
Tel. +49 40 540 005 0 · E-Mail info@elaflex.de